

Accessing the Info Mode Main Menu Screen Omnitronics™ & Intellitronics™ Controllers

Abstract: This application note describes how to access the Info Mode Main Menu screen of the Omnitronics™ and Intellitronics™ Controllers.


Overview

The Info Mode Main Menu screen of the Omnitronics™ and Intellitronics™ controllers allow access to the controller's configuration information (e.g., version number, Unit ID, Flash Memory). A password is required to access this screen.

Instructions

To access the Info Mode Main Menu screen:


- 1) Press and hold any blank, black area on the controller's screen for five (5) seconds. The Info Mode screen will open.
- 2) Press the **Enter Info Mode** button. An alpha-numeric keypad will open.

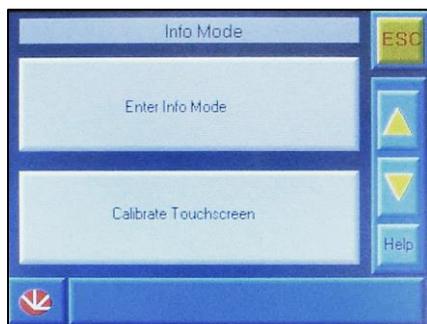

- 3) Enter the Info Mode Main Menu password **1111** by pressing the keypad buttons.



- 4) Press the enter button (i.e., ) to accept the password. The Information Mode Main Menu screen will open.
- 5) Press the Information Mode Main Menu buttons to navigate through and view information about the controller (e.g., version number, Unit ID, Flash Memory).

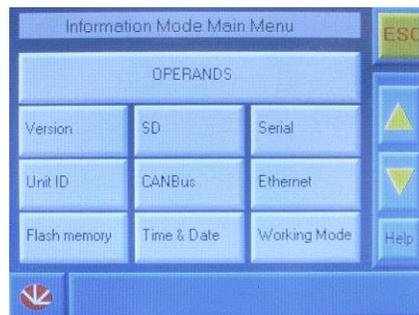

- 6) When ready, press the escape buttons (i.e., ) to exit the Information Mode Main Menu and Info Mode screens.