

Accessing the Maintenance 2 & Factory Setup Screens Intellitronics™ Controller

Abstract: This application note describes how to access the Maintenance 2 and the Factory Setup screens of the Intellitronics™ Controller.

Overview

The Maintenance 2 screen allows access to the Voltage Range, Ambient Temperature Range, Interstage Control, Relay Test, PID Tuning and Factory Setup screens.

The Factory Setup screen allows for system configurations based on purchased options. A separate password is required to access the Maintenance 2 screen and the Factory Setup screen.

Refer to the Intellitronics™ Controller Factory Settings Manual (Part Number 100008579) for further Maintenance and Factory Setup instructions.


Instructions

To access the Maintenance 2 screen:


- 1) Ensure the System Status screen is open.
- 2) Press the **Menu** button on the System Status screen. The Main Menu screen will open.



- 3) Press the **Maintenance** button on the Main Menu screen. The Maintenance screen will open.

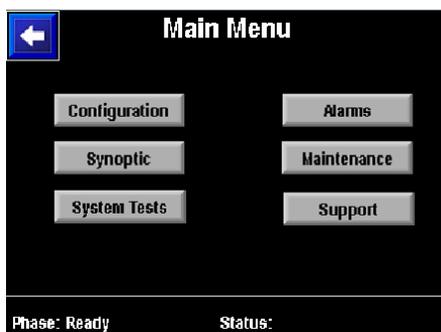


- 4) Press the title of the Maintenance screen (i.e., Maintenance) to access the Maintenance 2 screen. An alpha-numeric keypad will open.

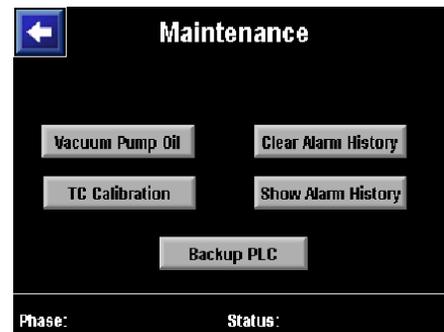

- 5) Enter the Maintenance 2 password **2222** by pressing the keypad buttons.




- 6) Press the **Enter** button (i.e., ) to accept the password.
- 7) The Maintenance 2 screen will open.

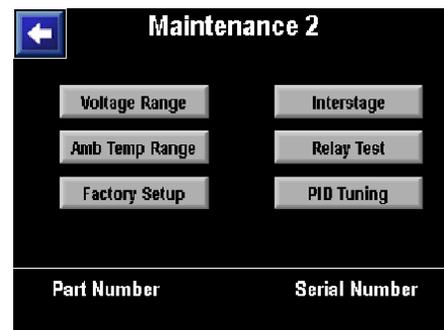

Note: If needed, press the back buttons (i.e., ) on the Maintenance 2, Maintenance and Main Menu screens to return to the System Status screen.

To access the Factory Setup screen:

- 1) Follow steps 1 – 7 of To access the Maintenance 2 screen.
- 2) Press the **Factory Setup** button on the Maintenance 2 screen. An alpha-numeric keypad will open.

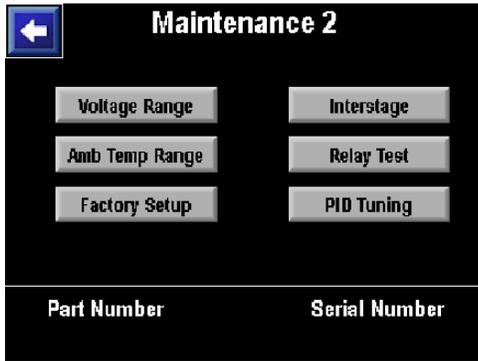

- 3) Enter the Factory Setup password **123** by pressing the keypad buttons.



- 4) Press the **Enter** button (i.e., ) to accept the password.
- 5) The Factory Setup screen will open.



Note: If needed, press the back buttons (i.e., ) on the Factory Setup, Maintenance 2, Maintenance and Main Menu screens to return to the System Status screen.